 


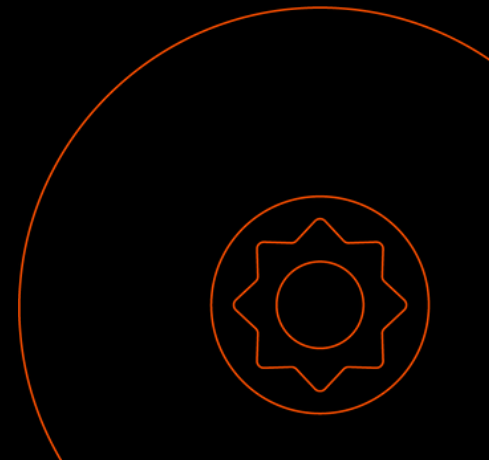

INFLATON

Graviton

INNOVATIONS







Here for you, and up there, too.

Welcome to the Gravition family! Congratulations with the purchase of your **INFLATON**. Before the fun can start, please check:

- Are you a trained professional?
- **Attention:** Only use the **INFLATON** after you read this manual carefully and familiarize yourself with the **INFLATON** before using it.

Now you're good to go.

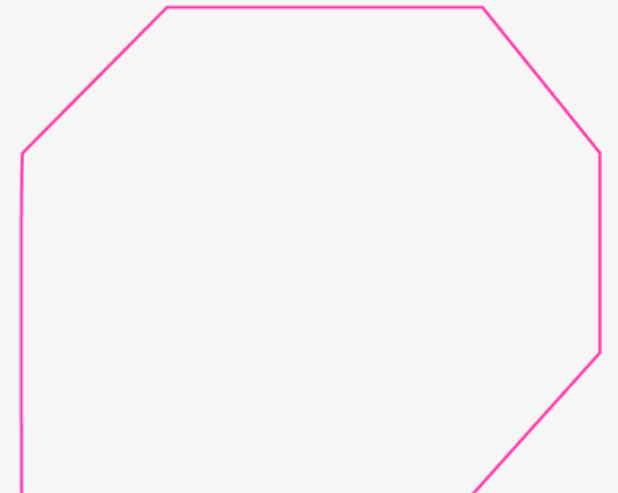

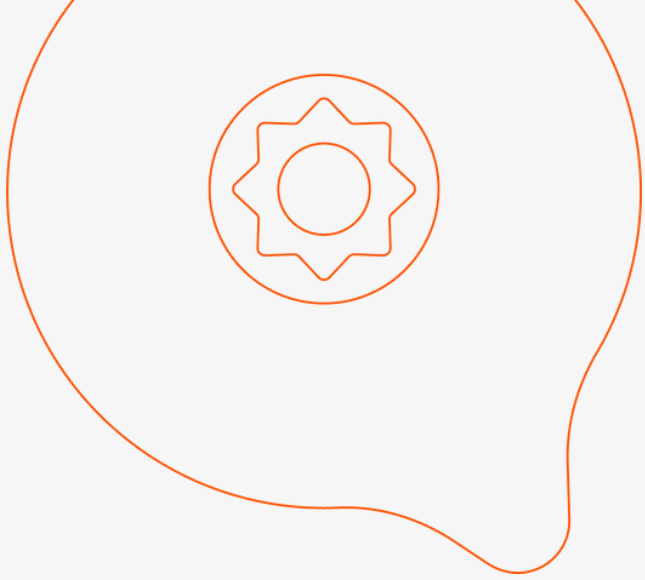

Index.

1 Something about us

2 Your **INFLATON**

3 Breathe in & breathe out

4 Fly with you

5 Keeping your **INFLATON** in shape

6 Warranty

7 Contact



We make your work easier, because we **understand** your world.


Founded by climbers with field experience, **Graviton** is here to solve problems you didn't even know existed. Our mission is clear: to deliver quality products through **meticulous design** and **advanced engineering**.

As they say, the sky is the beginning. From our first to our latest creations. Graviton is committed to making life easier for those who depend on **solid gear** at serious heights.

Our focus is on **practical solutions** that enhance **safety** and performance in demanding environments, ensuring tangible benefits. We did a damn good job of making our products look good, but always **prioritize quality** and rigorously testing and certifying our products for **reliability**.

Your INFLATON.

- A Tube
- B Netting
- C Valve
- D Handle
- E Strap connection
- F Link connection

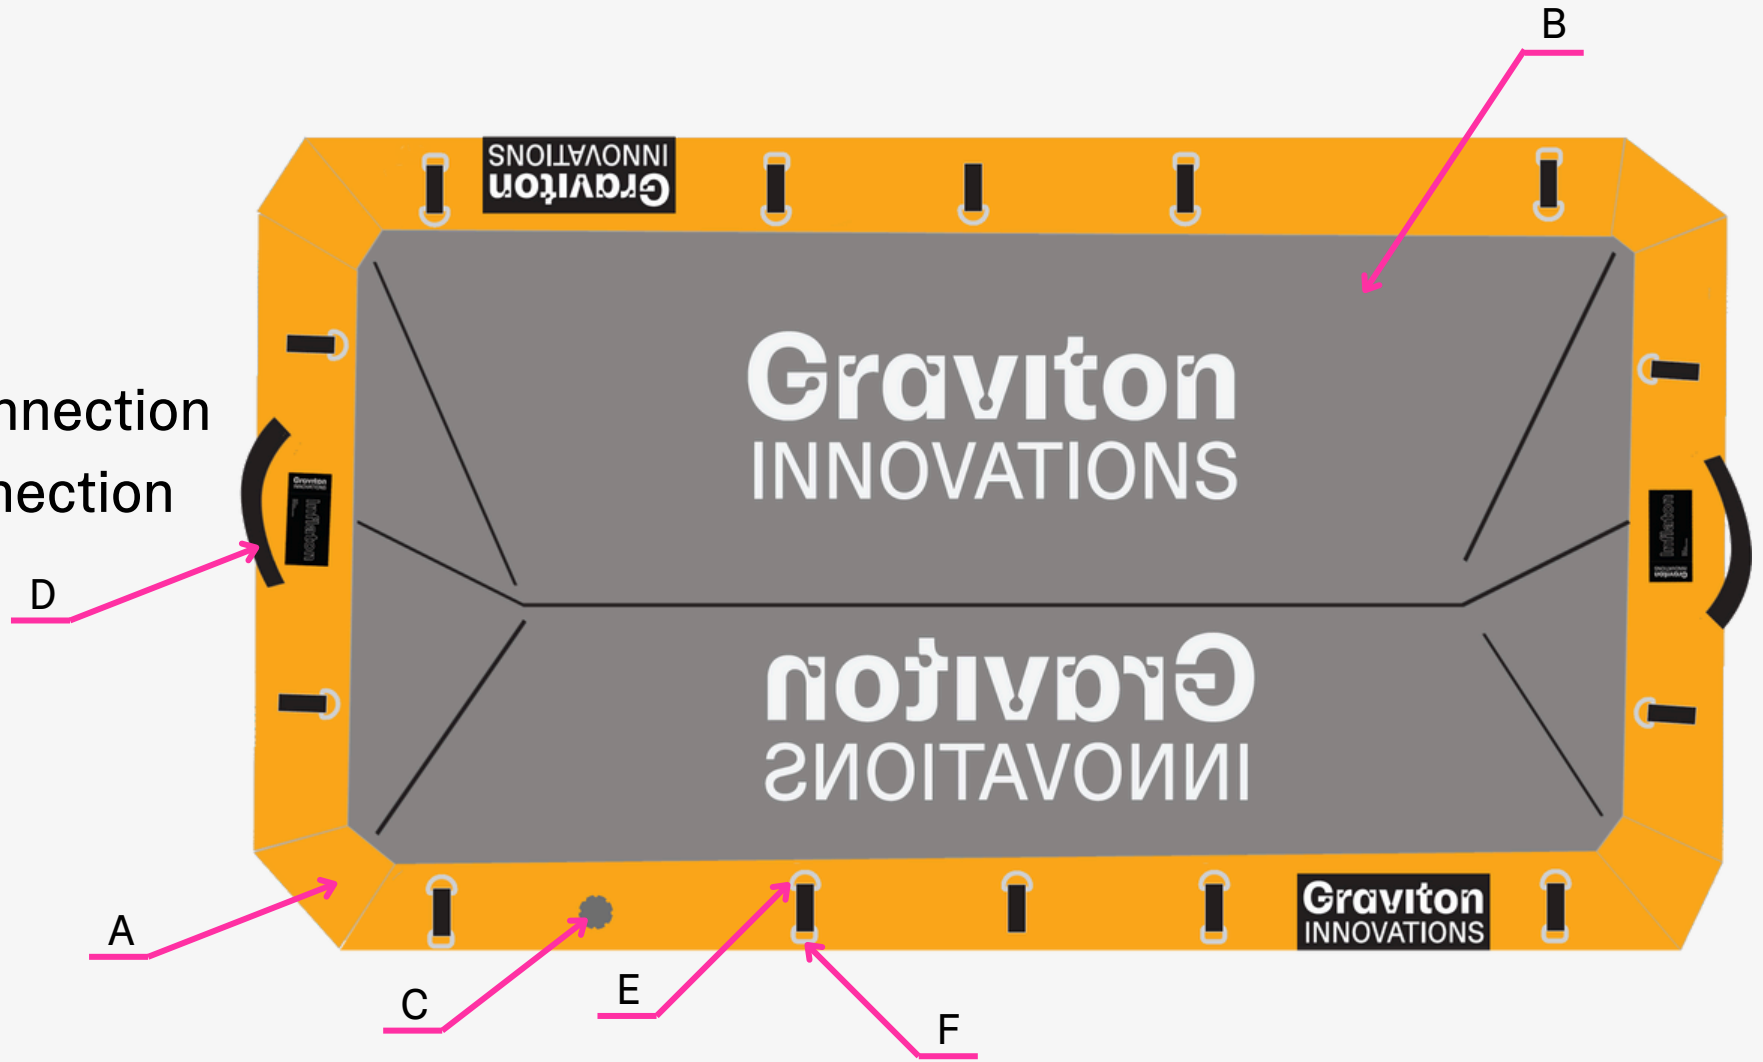

Breathe **IN** & Breathe **OUT**

The **INFLATON** inflation valve (C) is located on the long side.

To close off the valve for inflation, make sure that the center valve pin is in the “UP” position. If it is in the “DOWN” position, press down on the valve pin and turn it counter clockwise until it pops up.



NOW PUMP IT UP


Minimum pressure for proper INFLATON operation is **3.5 psi**. The maximum pressure is **4.5 psi**.

Breathe **IN** & Breathe **OUT**

After inflation, tighten the valve cap.
Only the valve cap can prevent air release.


To open the valve for deflation, press down on the valve pin and turn it clockwise so it locks down.

Always lock the valve cover over the valve stem when in use. This will prevent accidental air release and transfer of any particles into the air chambers.

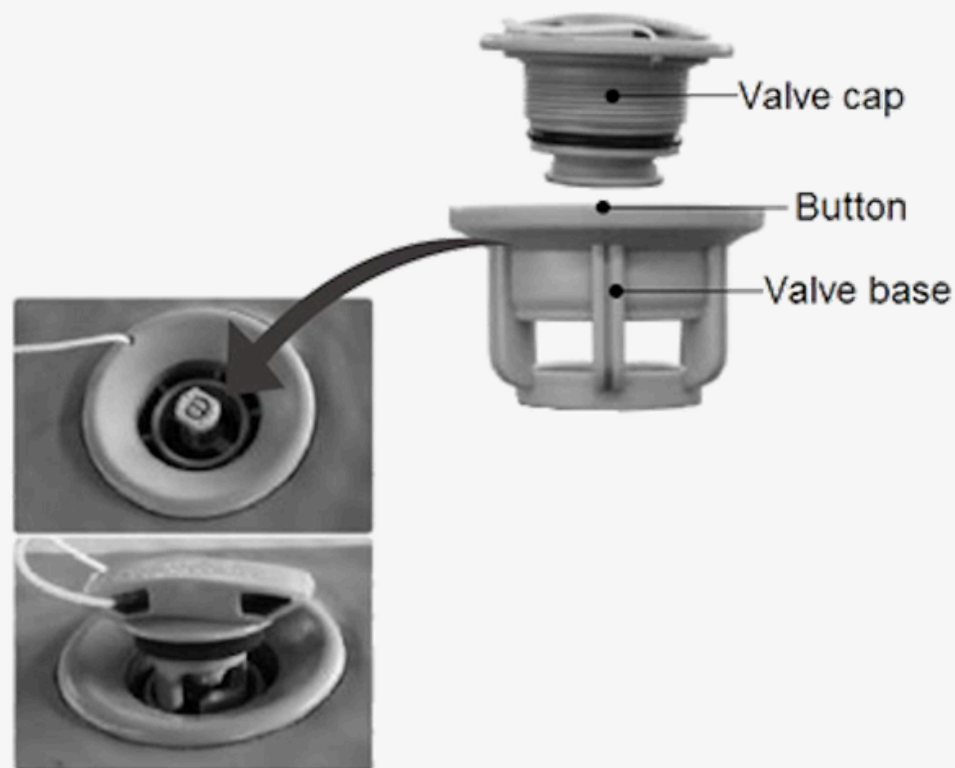

Fly with you

- **INFLATONS** can be connected to cover a larger area by coupling it with the rings on the tubes (*).
- The height between the operator and the net is adjustable by the straps.
- The **INFLATON** covers your back and catches small dropped objects and debris with a maximum of 5 kg.

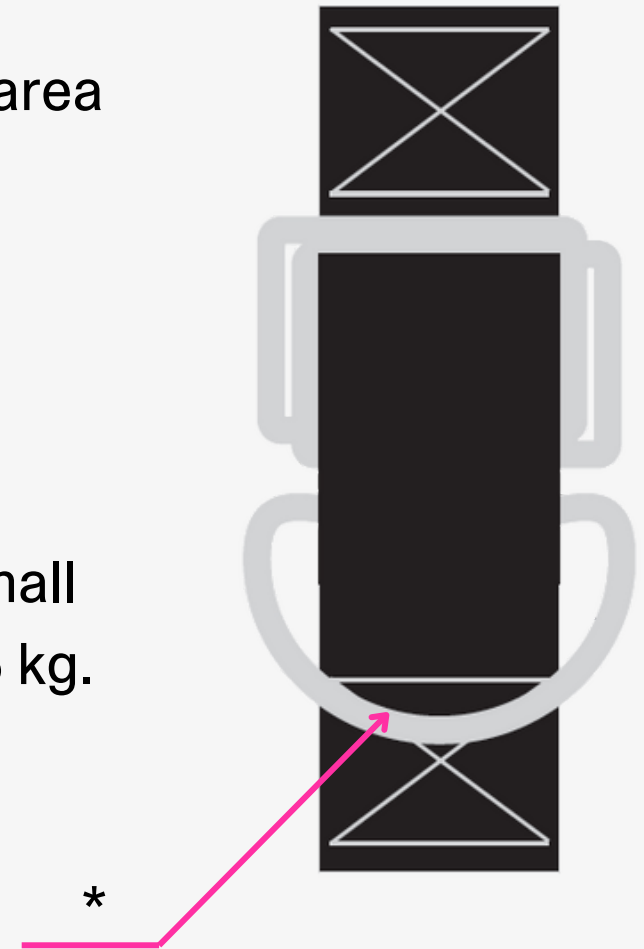

Keeping your **INFLATON** in shape.

The **INFLATON** is applied with premium fabric to provide superior protection from ultraviolet light. However, to ensure extra years of flexibility and safe use, the **INFLATON** loves to be stored in places where it will be not exposed to weather or direct sunlight.

The **INFLATON** likes to be cleaned with a mild soap and fresh water and stored dry. It hates harsh chemicals for cleaning. As it is a work of art you may store it both inflated or deflated. Whatever you like. If you deflate the **INFLATON**, it prefers to sleep in its protective bag.

Do not hang the **INFLATON** for storage and do not store it in extreme conditions (i.e. above 40 °C/104 °F or below 0 °C/32 °F).

When not in use for longer periods (> 2 months); inflate the **INFLATON** to prevent the tubes to stick together.

Warranty.

At Graviton, we stand by our products with pride and assurance. The **INFLATON** is covered under our comprehensive warranty as outlined in the general conditions of sale. Here's what you need to know:

Should your **INFLATON** prove defective or encounter any issues during the warranty period, we've got you covered. Our commitment is to repair or replace any faulty components after a thorough inspection by our team.

Important Considerations:

- **Maximum** air pressure for the **INFLATON** is **4.5 psi**; do not overinflate it as it will void warranty.
- **Modifications**: Any modifications made by the user without prior written authorization from Graviton will void the warranty. Such unauthorized changes release Graviton from any liability for damages caused by the defective product.

Please read the instructions in this manual carefully and follow all guidelines before using your INFLATON. This ensures optimal performance and helps maintain the integrity of your warranty.



Graviton



Contact.

Contact

+31-(0)85 – 1301 789

sales@gravitoninnovations.com

Postal address

PO Box 125 - 5490 AC

Sint-Oedenrode

The Netherlands

