



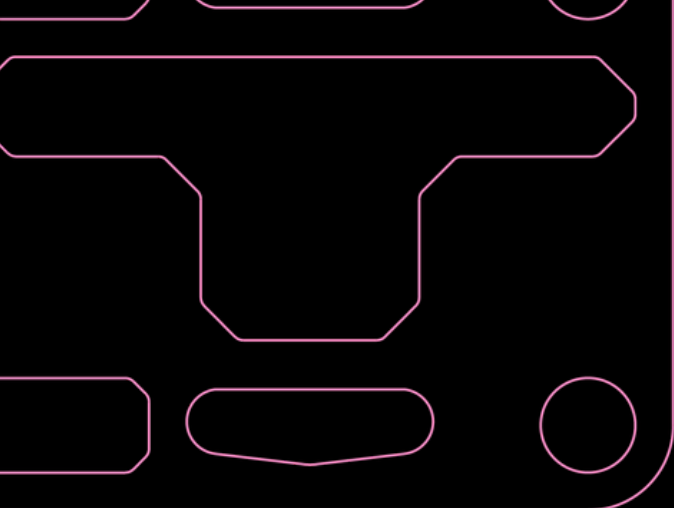

GLUON TA

Graviton

INNOVATIONS

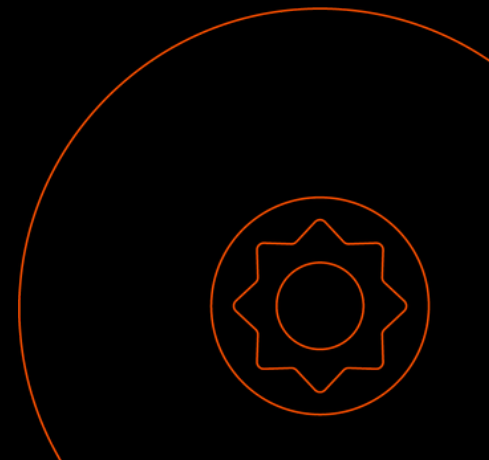




Here for you, and up there, too.

Welcome to the Graviton family. Congratulations on the purchase of your **GLUON TA**. Before the fun can start, please check:

- Are you a trained professional?
- **Attention:** Only use the **GLUON TA** in combination with the TerrAdaptor. Check the TerrAdaptor manual before use.

Now you're good to go.



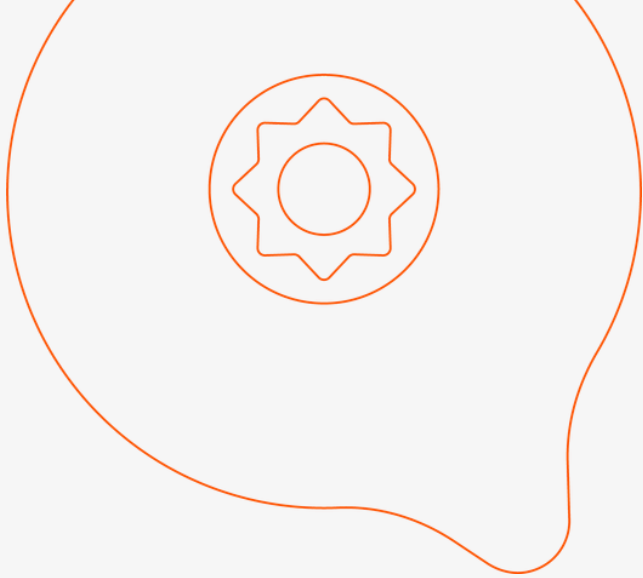

Index.

1 Something about us

2 Your **GLUON**

3 Pre-use checks

4 Installation

a. General

b. Inner leg

c. Outer leg

d. Feet

5 Keeping your **GLUON** in shape

6 Warranty

7 Contact



We make your work easier, because we **understand** your world.


Founded by climbers with field experience, **Graviton** is here to solve problems you didn't even know existed. Our mission is clear: to deliver quality products through **meticulous design** and **advanced engineering**.

As they say, the sky is the beginning. From our first to our latest creations. Graviton is committed to making life easier for those who depend on **solid gear** at serious heights.

Our focus is on **practical solutions** that enhance **safety** and performance in demanding environments, ensuring tangible benefits. We did a damn good job of making our products look good, but always prioritize **quality** and rigorously testing and certifying our products for **reliability**.

Your **GLUON**.


- A Gluon
- B Adjustment ring
- C End ring

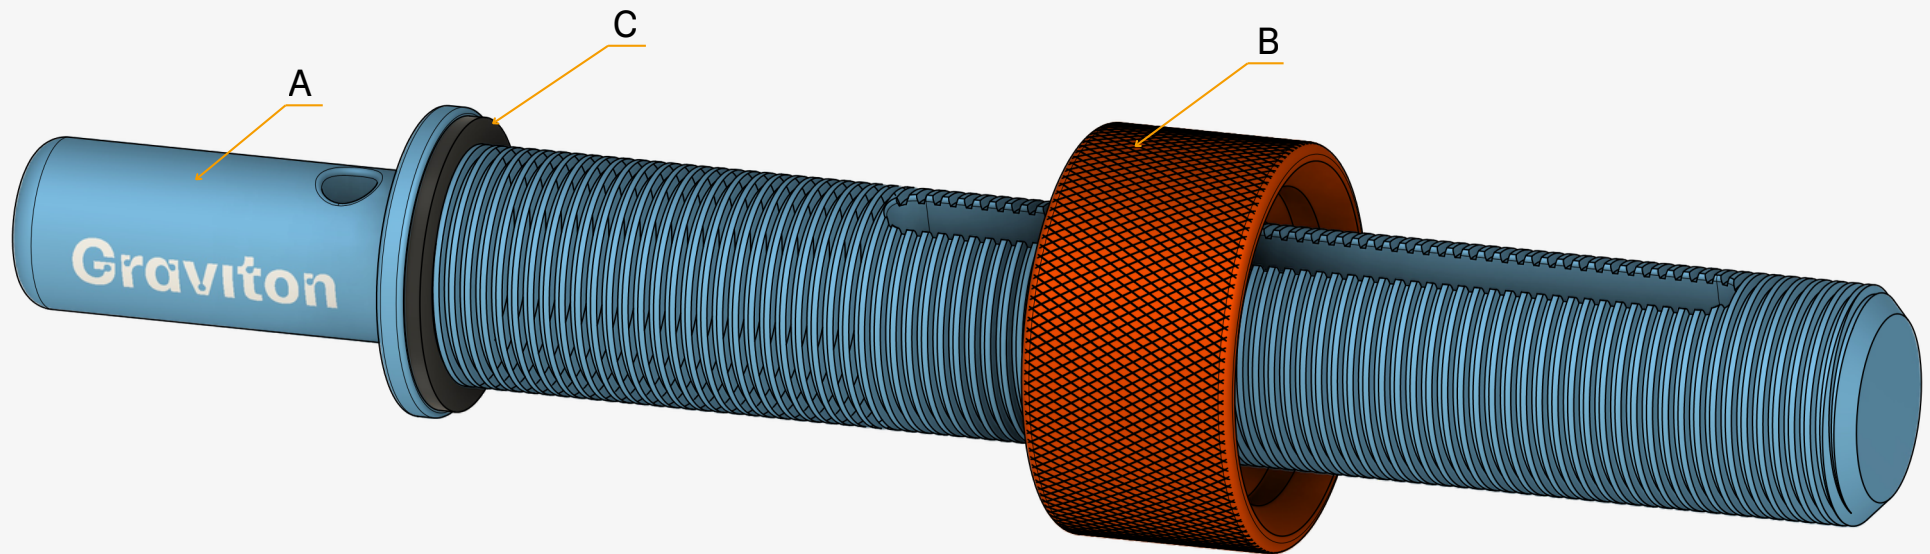

Pre-use checks.


Always check:

- For cracks, deformations and possible damages.
- Ensure the adjustment ring rotates smoothly and remove any sand or debris in the threads.
- Just like the TerrAdaptor the Gluon is designed for compression forces. Avoid any setups that may cause side loading on the TerrAdaptor or Gluon (*).
- Hand-tightening a clean, unlubricated Gluon can generate approximately 1.2 kN of compression.

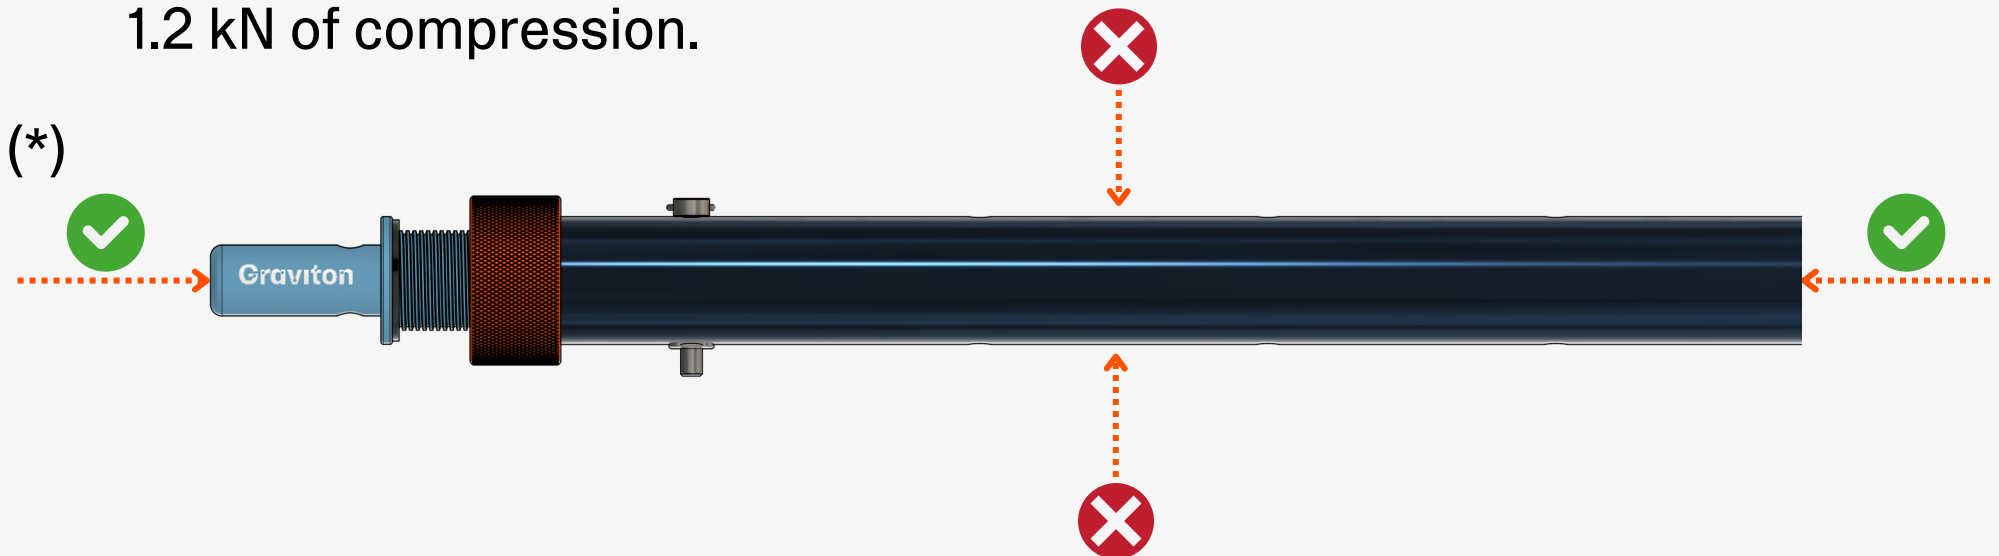

Installation **general.**

- Always use the TerrAdaptor lock pins (1) to secure the legs through the slot of the Gluon (2).

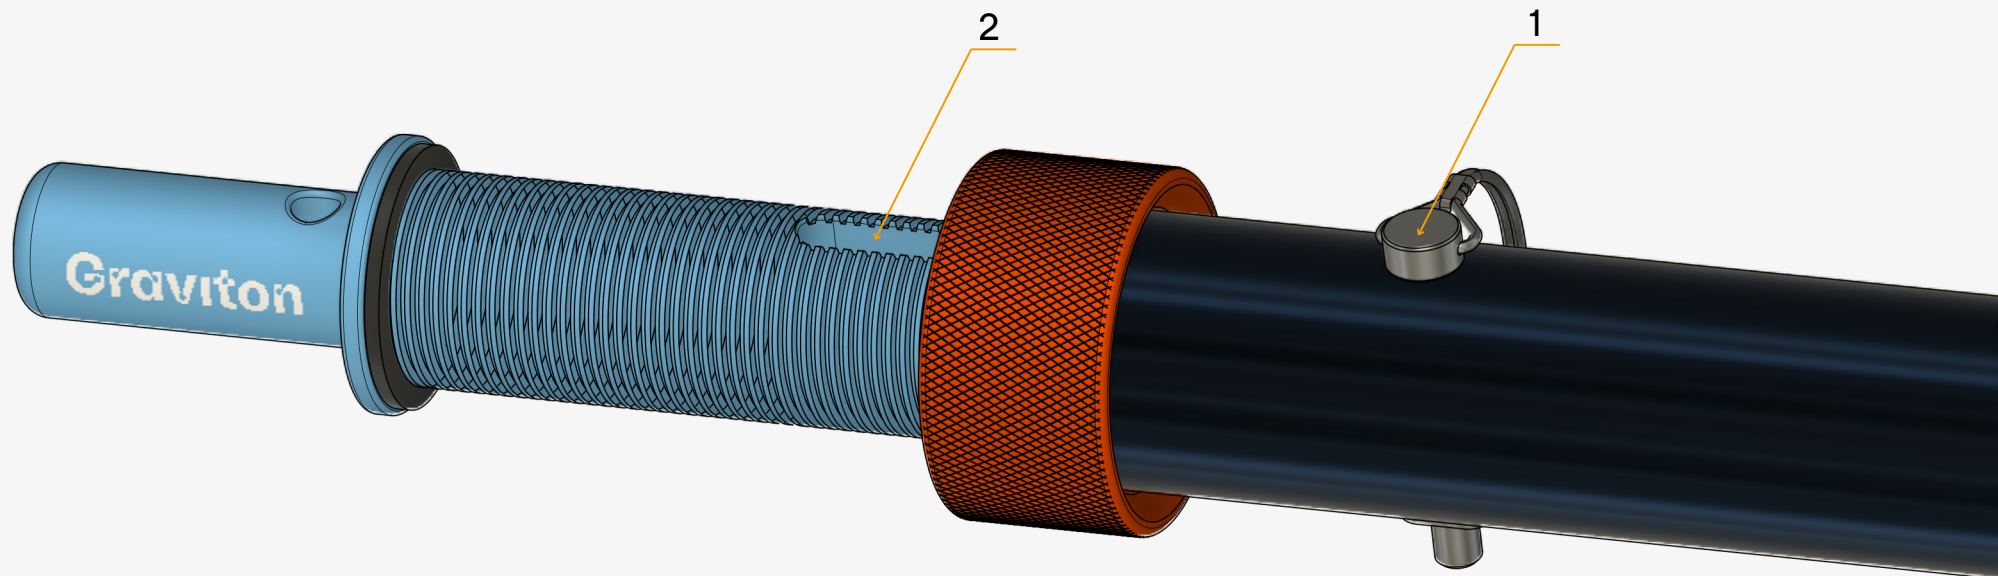

Installation with an inner leg.

Using the Gluon with an inner leg makes it adjustable, providing even more possibilities with your TerrAdaptor.

Ensure the orientation of the adjustment ring is correct. The side marked “Inner Leg” should face the side of the inner leg.




Installation with an outer leg.

Ensure the orientation of the adjustment ring is correct. The side marked “Outer Leg” should face the side of the outer leg.




Installation with TerrAdaptor feet.

- The Gluon can be used with all TerrAdaptor feet.
- Always **lock** the Gluon to the feet using a TerrAdaptor quick pin.

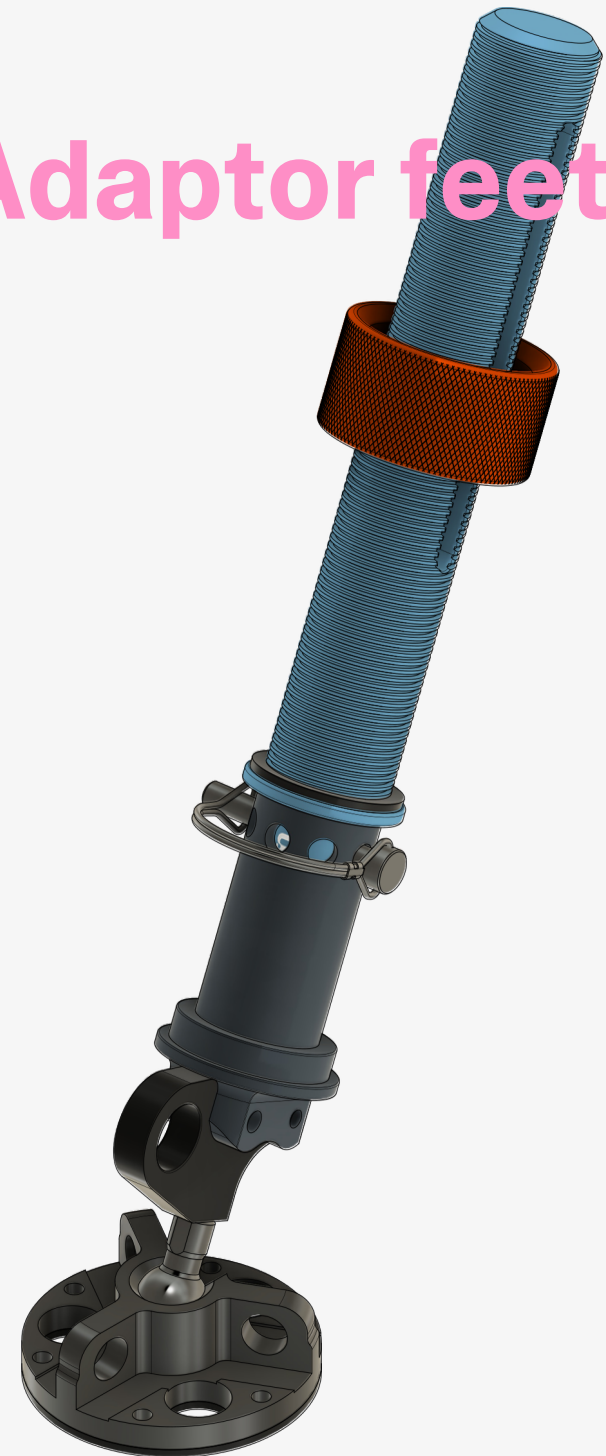

Keeping your **GLUON** in shape.

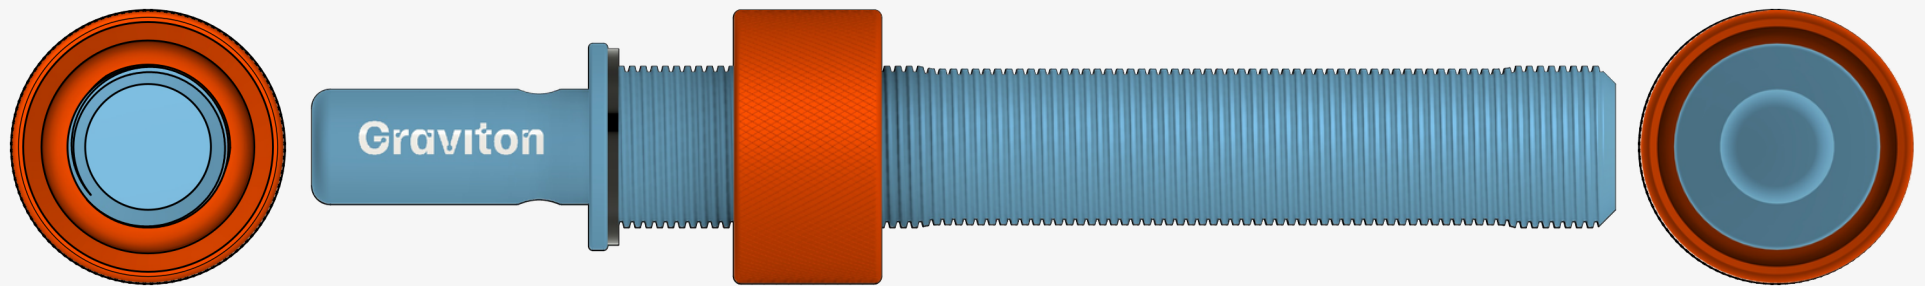

GLUON loves to stay **clean** and feel seen, so always **visually** inspect him before use. Make sure there are **no cracks** or **deformations**. The adjustment ring should rotate smoothly.

Have him checked at least once every twelve months by a competent person (approved by the manufacturer).



Warranty.

At Graviton, we stand by our products with pride and assurance. The **GLUON** is covered under our comprehensive warranty as outlined in the general conditions of sale. Here's what you need to know:

Should your **GLUON** prove defective or encounter any issues during the warranty period, we've got you covered. Our commitment is to repair or replace any faulty components after a thorough inspection by our team.


Important Considerations:


- **Modifications:** Any modifications made by the user without prior written authorization from Graviton will void the warranty. Such unauthorized changes release Graviton from any liability for damages caused by the defective product. If you have any suggestions for modifications that could improve our products, please let us know.
- **Spare Parts:** Using non-original spare parts or those not explicitly specified by Graviton will also void the warranty and release us from liability.

For these reasons, we strongly advise all customers to contact Graviton technical support for any assistance or when in doubt.

Please read the instructions in this manual carefully and follow all guidelines before using your **GLUON**. This ensures optimal performance and helps maintain the integrity of your warranty.

Coloring page.

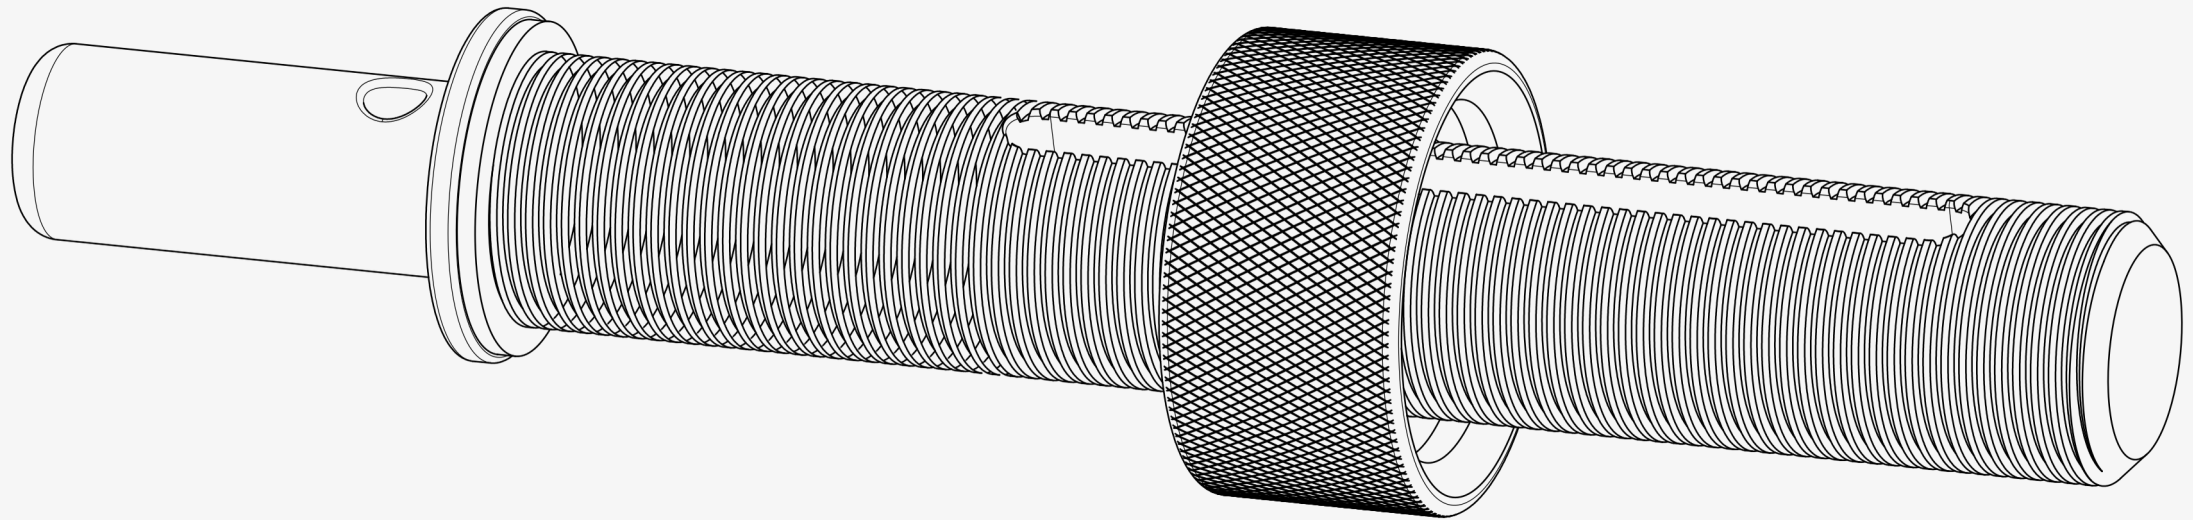

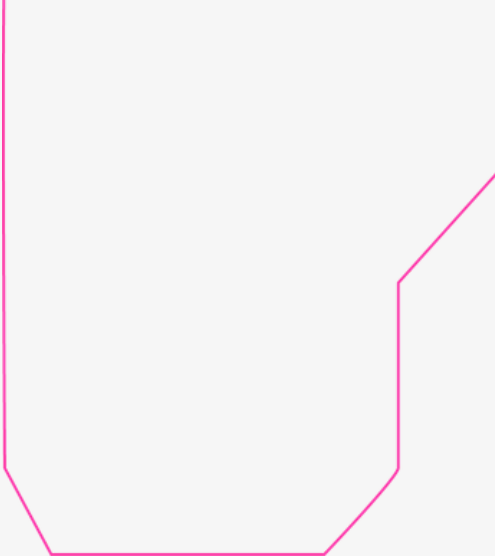

Graviton

Contact.

Contact

+31-(0)85 – 1301 789

sales@gravitoninnovations.com

Postal address

PO Box 125 - 5490 AC

Sint-Oedenrode

The Netherlands

